


NOTE = ELASTOMERIC ROOFING =

1. AT EACH VALLEY, RIDGE, BUTT JOINT & WHERE PLUMB DECK BUTTS VERTICAL WALLS PROVIDE 'FLEXSEAL' COATING W/ POLYMER TAPE 2" WIDE OVER JOINT AND BRUSH SECOND COAT OVER TAPE. ALLOW 24 HR. CURE TIME. AT EACH TAG JOINT OF THE PLUMB DECK & BUTT JTS, BRUSH 'FLEXSEAL' SEALANT.
2. 24 HOURS AFTER 'FLEXSEAL' APPLICATION, APPLY 'FLEXOTHERM' FIRE RESISTANT AS PER SPECS OVER ENTIRE PLUMB DECK TO OBTAIN A QUES W/ RATING UL700, ASTM E 108, & UBC STANDARD 52-7
3. FINISH ROOFING APPLICATION SHALL BE AS PER SPECS.

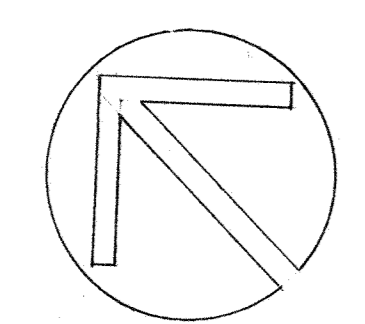

ROOF PLAN
SCALE: 1/8" = 1'-0"

REVISION NO.	SYMBOL	DESCRIPTION	SHEET OF	DATE	APPROVED: STATE PUBLIC WORKS ENGINEER
DEPT. OF ACCOUNTING & GENERAL SERVICES DIVISION OF PUBLIC WORKS STATE OF HAWAII					
LAHAINA HEALTH CENTER LAHAINA, MAUI, HAWAII					
ROOF PLAN					
DESIGNED BY: YN	CHECKED BY: YN	DACS JOB NO. 05-20-112	DRAWING NO. A-5		
DRAWN BY: YMM	APPROVED BY: [Signature]	DATE: MAY 1984	SHEET 10		
SCALE: 1/8" = 1'-0"	THIS WORK WAS PREPARED BY ME OR UNDER MY SUPERVISION				